

BBQ barbecues


12375

Supplied exclusively by:
LANDMANN® Ltd.
Unit 6 · Blackstone Road · Stukeley Meadows
Huntingdon · PE29 6EF · United Kingdom



Ignitor

Pressure: 28-30 / 37 mbar
Power: approx. 5.5 kW
Consumption: approx. 2 x 200 g/h
Gas: Butane / Propane
Category: I₃₊

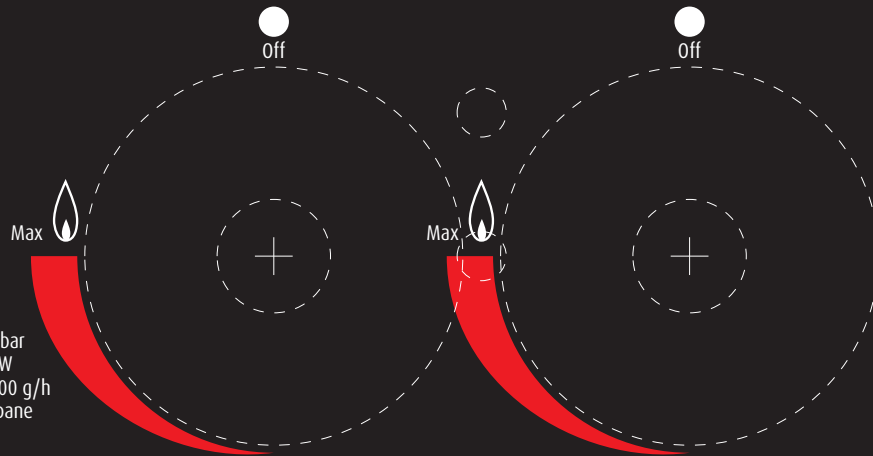


Burner controls

**WARNING - USE OVEN MIT/
OVEN GLOVE WHEN USING
THIS BARBECUE.**

**Use outdoors only.
Read the instructions before
using the appliance.
Warning: accessible parts
may be very hot. Keep
young children away.**

Lighting instructions

1. Read instructions first before using this appliance.
2. The lid must be open when lighting the burner.
3. Open gas bottle valve according to the instruction booklet.
4. Turn the left burner control to the Max  position. Push ignitor button several times.
5. When left hand burner is lit, turn right burner control button like step 4. Ignition is made by the left burner part.
6. In case of failure turn burner control to ● (Off) and wait approx. 5 minutes. Repeat step 4.
7. Adjust burner control to appropriate setting. Close lid.
8. To turn the barbecue 'OFF' turn the cylinder valve or regulator switch to the 'OFF' position and then turn all of the control knobs on the appliance clockwise to the 'OFF' position.